


# Sneeze Guard

## ASSEMBLY INSTRUCTIONS

### READ THESE INSTRUCTIONS CAREFULLY BEFORE YOU BEGIN


#### PEEL

- Beginning at an edge of the acrylic sheet, peel back the protective film and remove it from both sides.
- Beginning at an edge of each acrylic foot, peel back the protective film and remove it from both sides.

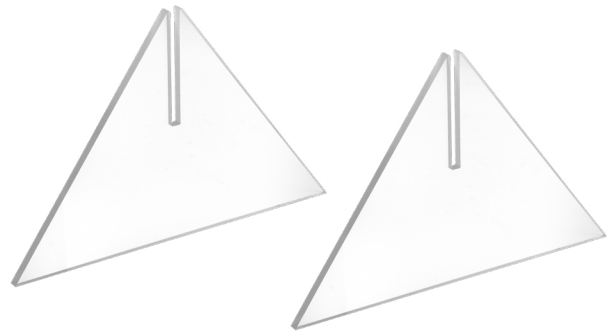

#### INSERT

- To avoid scratching and cracking the sneeze guard, insert the slot of an acrylic foot straight into a slot of the acrylic sheet.
- Repeat action with remaining acrylic foot into the remaining slot of the acrylic sheet.

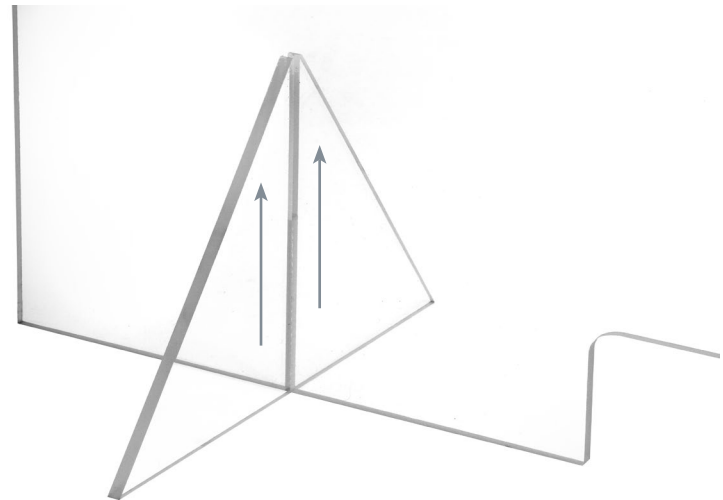

#### ISO 9001:2015 Certification

Arvinyl Laminates received the ISO 9001:2015 certification through Perry Johnson Registrars, Inc., based on a review of our quality management system.



#### Arvinyl Laminates

233 N. Sherman Avenue  
Corona, California 92882  
Email: Sales@arvinyl.com  
URL: [www.arvinyl.com/arvinyl-sneeze-guard/](http://www.arvinyl.com/arvinyl-sneeze-guard/)  
Direct: 951-371-7800